 


# Keyboard Shortcuts Commands from Menu/Ribbon

## Ribbon Interface:

Civil 3D



## AutoCAD and BricsCAD



Ribbon Command		Keyboard Shortcut	Notes	
Panel	Dropdown			Command Name
Point Styles		Import Point Styles	<NONE>	AutoCAD and BricsCAD only
Settings		Stringer Settings	STS	
		Stringer Settings Parameters	STRSTS	
		Open Settings Folder	STRSETTINGSFOLDER	
		Point Style Creator	PSEEDITOR	AutoCAD and BricsCAD only
		Tree Block Definition	VTR	
		Replace Code Settings	REPLCODESETTINGS	
		Select Different Surface	SELS	Civil 3D only
Import		Import and Reduce	STRC	
		Auto Reduce	<NONE>	AutoCAD and BricsCAD only
		Reduce Leica XML	STR_IMPORT_SURVEY_XML	
		Import 12da Files	READ12D	
		Import CivilCAD File	CIVILCADIN	
		Import Geocomp Files	GEOCOMPIN	
Stringing		Join All Codes	JAC	
	Join Selection	Join Selection	JS	
		Manual Join	BLMAN	
		Join By Codes	JBC	
		Join by Number Range	JPNR	
Point Groups		Point Group Commands	PGC	Civil 3D only
Points	Create Points	Create Points (Make New Points)	MPTS	AutoCAD and BricsCAD only
		Distance Offset	DISTOFF	AutoCAD and BricsCAD only
		Add Points to Linework	LINEINT	AutoCAD and BricsCAD only
	Point List	Point Groups	PTGROUPS	AutoCAD and BricsCAD only
		Point List	PTLIST	AutoCAD and BricsCAD only
		Find Points	STR_FIND_BY_CODE	AutoCAD and BricsCAD only
		Edit Point Display	EDITDISP	AutoCAD and BricsCAD only
		ATTOFF	ATTOFF	AutoCAD and BricsCAD only
		ATTON	ATTON	AutoCAD and BricsCAD only
Surface		Create/Update	XDTM	AutoCAD and BricsCAD only
		Dynamic Surface	DYNAMICSURFACE	AutoCAD and BricsCAD only
		Query Surface	QDTM	AutoCAD and BricsCAD only
		Crossing Breaklines	XINGBL	AutoCAD and BricsCAD only
	Surface	Surface Manager	EDITDTM	AutoCAD and BricsCAD only
		Surface display	ARDUV7STRINGERONOFF	AutoCAD and BricsCAD only
		Extract Objects	ARDUV7EXPLODESTRINGER	AutoCAD and BricsCAD only
	Surface Boundary	ARDUV7AJEBBOUNDARYOUTPUTSTR	AutoCAD and BricsCAD only	
Parameters		Close String	ADCC	
	Fit Arcs	Fit 3pt Arcs	ADF	
		Arc Tangential	ADA	
		Straight Line	ADL	
		Rectangle from 3pts	ADR	
		Non contourable	ADU	
	Remove Level Text	ADZ		
Point Edits	Replace Codes	Replace Codes	REPLCODES	
		Replace Code Settings	REPLCODESETTINGS	
	Increment Strings	Increment String Numbers	ISN	
		Increment Strings on .. Parameters	AISN	
		Auto Increment String Number	ARV	
		Renumber Strings from a Start Number	STRNUM	
	Search and Replace	Search and Replace Full (Civil 3D only)		
		Search and Replace	SRD	
		Search and Replace on Poly	ICP	
		Search and Replace by Pick	SRP	
	Split Codes	Split Codes	SPCODE	
		Split All Codes	SPALL	
	Renumber Points	Switch Point Numbers	SPN	
		Renumber Point Numbers	RENUM_PTS	
	Edit Strings	Match Codes	CVC	
		Multiple Codes	CVA	
		Add New Multiple Codes	STR_DBL_CODE	
	Reorder	Reorder Distance to Next	RDX	
Reorder by Selection		RBS		

Ribbon Command			Keyboard Shortcut	Notes
Panel	Dropdown	Command Name		
	Edit Codes	Reorder Automatic	ROA	
		Reorder by Poly	RBP	
		Switch Point Numbers	SPN	
		Edit Point Code	EDP	
		Edit Multiple Point Codes	EDPS	
		Join Codes	JCS	
		Delete Line Segment	REMC	
		Embed New Code	ENC	
Validation		Validate Codes	RAC	
		Verify Codes against the KDF	KDV	Civil 3D only
3D View	Model Viewer	Model Viewer	ARDUV7AJEB_MODELVIEWERSTR	
		Satellite Surface	ARDUV7AJEBSATELLITESURFACESTR	
		MV Output	ARDUV7AJEBMVCADOUTPUTSTR	
		Combined Surface	ARDUV7AJEBCOMBINEDSURFACESTR	
		Point Cloud	ARDUV7AJEBPOINTCLOUDSTR	
Output	Export Extract	Explode Surface and Points	<NONE>	AutoCAD and BricsCAD only
		Explode Points	STR_EXTRACT_ATTRIBUTES	AutoCAD and BricsCAD only
		Extract Surface	ARDUV7EXPLODESTRINGER	AutoCAD and BricsCAD only
		Extract Boundary	ARDUV7AJEBBOUNDARYOUTPUTSTR	AutoCAD and BricsCAD only
		Legend Table	LEGT	AutoCAD and BricsCAD only
		Display Block at Elevation	STR_POINTS_TO_ELEVATION	AutoCAD and BricsCAD only
		Export 12d Files	EXPORT12D	
		Export GENIO	XGENIO	
		Point Group Commands	PGC	Civil 3D only
	Trees	Replace Tree Symbol	RTS	
		Tree Block Definition	VTR	
		Align Symbols	^CSYMAL	
	Legend	Legend Table	LEGT	
		Legend Table-All	STR_ANY_OBJECT_LEGEND	
		Display Block at Elevation	STR_POINTS_TO_ELEVATION	
		Point Groups	PTGROUPS	
	Export	Export 12d Files	EXPORT12D	
Export GENIO		XGENIO		
Cadastral	Add Labels	Auto Label	STR_BRD_AUTO	
		Label Segments	STR_BRD	
		Add 180d	STR_BRG_ADD180	
		Flip Labels	STR_SWAP_TEXT	
		No. and Area Label	STR_GET_PARCEL_AREA	AutoCAD and BricsCAD only
		Number only Label	STR_PARCEL_NUMBERS	AutoCAD and BricsCAD only
		Draw Cadastral Lines	DCL	
		Traverse Editor	TE	
		Compare Points/Lines	COMP	
		HD Manual	HD	AutoCAD and BricsCAD only
	HD Options	HD Type	HDPP	AutoCAD and BricsCAD only
		HD Pick	HDP	AutoCAD and BricsCAD only
		Bearing Dist. (BRDD)	BRDD	
		Radiation Table	RAT	
	Point Creation	Add Points to Linework	LINEINT	AutoCAD and BricsCAD only
		Create Points by Distance Offset	DISTOFF	AutoCAD and BricsCAD only
	Chainage Reports	Chainage Offset	STR_OFFSET_DIST	AutoCAD and BricsCAD only
Dist Offset Inquiry by No.		STR_OFFSET_DIST_BY_NUMBERS	AutoCAD and BricsCAD only	
Surface		Surface Display	TOGGLE_SURFACES	Civil 3D only
Utilities	Utilities	Stringer Extras	STRX	
		Purge Unused Point Styles	PUPS	Civil 3D only
		DKS Point Styles	DKFPS	Civil 3D only
		Check DKS for Codes	CKFC	Civil 3D only
		Find Points	STR_FIND_BY_CODE	AutoCAD and BricsCAD only
		Manual Join	BLMAN	
		Join 3D Poly	JDP	
		Make 3D Breakline from 2D Poly	3D2D	
		Remove Poly Segment	REM	
		Manual Template	OSP	
		Remove Xdata from Strings form Templates	REMXD	
		Create Attributed Blocks	ATTB	
		Replace AEC Points	RAECP	Civil 3D only
		Replace Carlson Points	RCP	
		Offset and Hatch	STR_BDG_OFFSET	
	Insert Block Attributes	STR_INSERTBLOCKS		
Admin		License Activation	STRRESTORE	
		Stringer Topo Help	<NONE>	
		Getting Started	<NONE>	
		Stop Software	STRRELEASE	
		Download Updates	<NONE>	